


SPRING FASTENERS

Clips

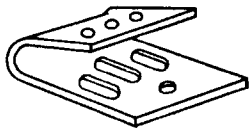


- For attaching No-Sag Springs to furniture with nails.

107318 EK Clips



- 7/8" spiral shanks for nailing EK Clips.

107322 Ardox Nails

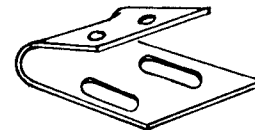


- For attaching No-Sag Springs to furniture with staples.

107319 EKS Clips

Connectors

- Used as spring inter-ties to provide a more even distribution of loads and a better base for fillings.



Connecting Links

- Low cost ties for seat and back constructions.

107343 3" Connecting Links

107344 3 1/2" Connecting Links



Back Helicals

- Open hook, open wound
17 gauge wire. 1/2" O.D.

107314 2" Back Helicals

107315 2 1/2" Back Helicals

107316 3" Back Helicals

(Use 2" Helicals for 4" spacing, 2 1/2" for 4 1/2" spacing, 3" for 5" spacing.)



Seat Helicals

- Open hook, close wound
15 gauge wire. 1/2" O.D.

107310 2" Seat Helicals

107311 2 1/2" Seat Helicals

107312 3" Seat Helicals



Paper Covered Wire

- Used across springs to stabilize construction and to evenly distribute spring load.

- Twisted paper covering prevents squeaking.

107399 Paper Covered Wire 15 gauge (3000 ft)



Flexcon

- Used across springs to stabilize construction and to evenly distribute spring load.

- 12 gauge plastic covered wire prevents squeaking.

107301 Flexcon 12 gauge (2000 ft.)

SPRING EDGE ACCESSORIES

Edge Wire




- 180" length x 9 gauge.

(Approximate thickness shown above).

107332 Edge Wire 180" x 9 gauge

Torsion Springs

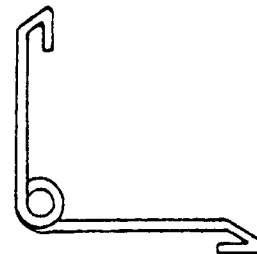

- For stiffening corners & edges. 10 gauge x 4" leg.

- Double turn loop provides extra support.

107308 DT Torsion Springs